


Operating Instructions

NEUTRALLE[®]

MICROBURST




3000

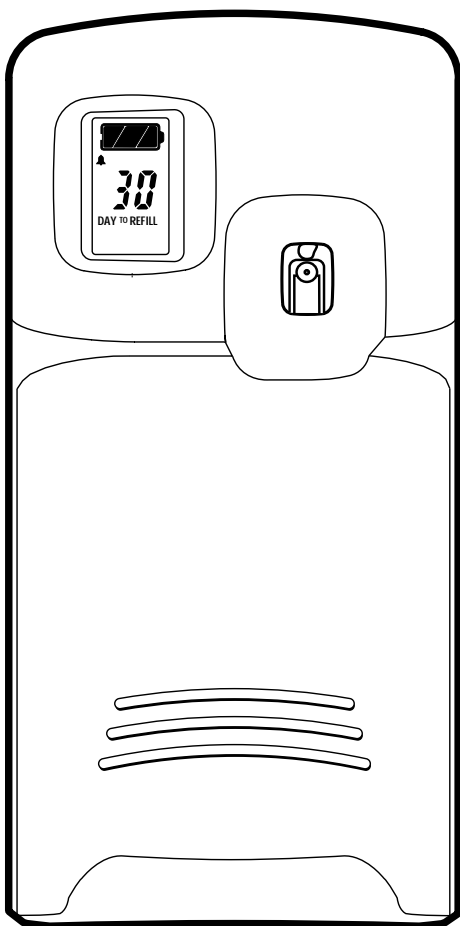

*Neutrale Microburst 3000
Automatic Aerosol System*

Neutralle® Microburst 3000 Aerosol Dispenser

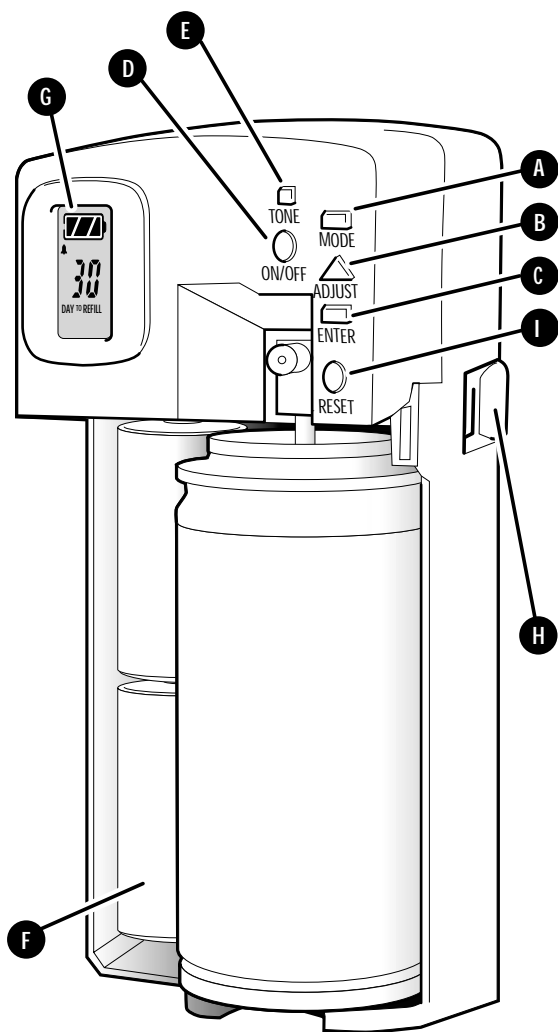


Neutralle Microburst 3000 Aerosol Dispenser

Controlling your washroom environment

Neutralle Microburst 3000 with Microtrans allows you to control and maintain the right environment for your business. Real time programming and consistent fragrancing lets you customise your washroom environment and establish a controlled maintenance programme 24 hours a day.

Wall Mounting

1. Dispenser should be positioned at a minimum height of 7' (2.2m) for best results.
2. Position the Microburst 3000 Dispenser over a wall stud and secure with supplied screws.

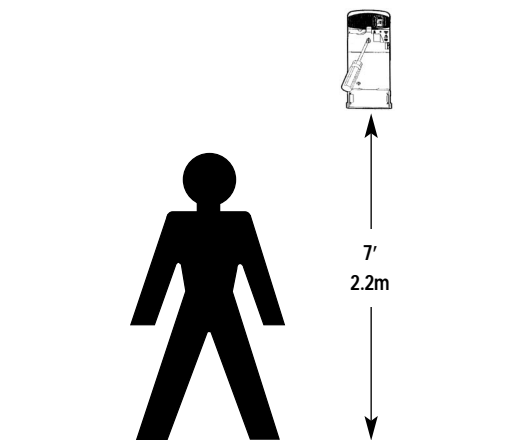

GB Programming Instructions

- Open dispenser cover by pressing keyless lock. (H)
- Insert two "C" cell alkaline batteries. (F)
- Press **ON/OFF** button (D) until display appears in LCD panel (G). "ON" audio signal will also confirm the dispenser is operational.
- Dispenser will automatically function with audio signals to reinforce the need to replace refill and/or batteries. To cancel audio signal, press **TONE** button (E) (🔊 symbol will disappear from LCD display. To reinstate audio alarm, press **TONE** button (E) until 🔊 symbol reappears on the LCD display).
- The factory setting will be displayed on LCD display (G).


Visual battery monitor



- If factory settings are satisfactory proceed to step 6. If you wish to change the settings, follow 1 - 5 below.


STEP 1. SELECT DISPENSING LEVEL

- Press the **MODE** button (A) to select the required days to refill setting.
- Press the **ADJUST** button (B) to move between options: 30, 60 and 90 day cycle.
- Press **ENTER** (C) to save selected setting.
- Display will show number of days in refill cycle.

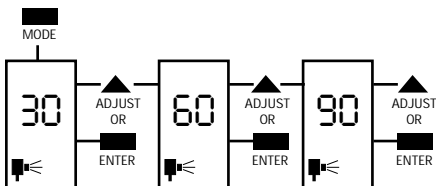


STEP 2. SET TIME CLOCK

- Press **MODE** to set the time.
- Press **ADJUST** to adjust clock by increments of 10 min.
- Press **ENTER** once real time is shown.

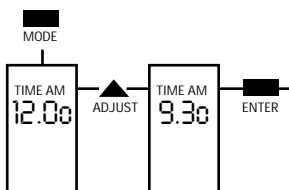


STEP 3. SELECT NUMBER OF HOURS OF OPERATION

- Press **ADJUST** to choose 12 or 24 hour operation.
- Press **ENTER** to save selected setting.

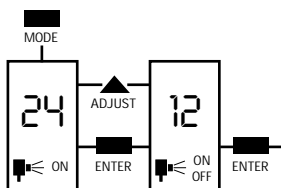


- If you choose a 12 hour setting:
- Press **ADJUST** to set the start time of 12 hour period.
- Press **ENTER** once desired start time is shown.
- Display will return to “Days to Refill” setting.

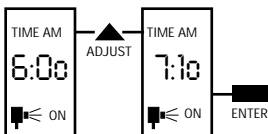


STEP 4. SET THE DAY OF THE WEEK

- Press **MODE** to set the day of the week.
- Press **ADJUST** to scroll through days.
- Press **ENTER** once actual day is shown.

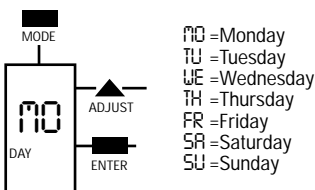

STEP 5. SELECT DAYS OF OPERATION

- Press **ADJUST** to select if dispenser should be **ON** or **OFF** for the day shown on the display.
 - Press **ENTER** to save setting.
- NOTE: Dispenser operates a 5, 6 or 7 day cycle. Selected OFF days do not have to be consecutive

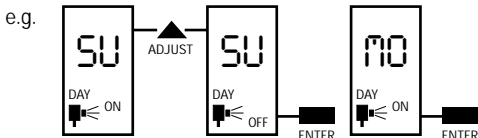

STEP 6. REFILLING DISPENSER

- Press the red **RESET (I)** button for up to 4 seconds. (double audio signal indicates reset is complete) **IMPORTANT: Do this every time a refill is replaced.** If reset button is pressed for 5 seconds, the dispenser will automatically switch to “DEMO” mode and revert to factory setting of 30 days.
- Insert refill and close cover. Do not stand directly in front of dispenser.

STEP 7. CHANGING BATTERIES

- Dispenser will hold the display for 1 minute, allowing you to change the battery without losing the setting. Alkaline battery life approximately 3 years.
- Visual battery monitor will flash when battery reaches last 30 days of life.


Operating Instructions

NEUTRALLE[®]

MICROBURST



3000

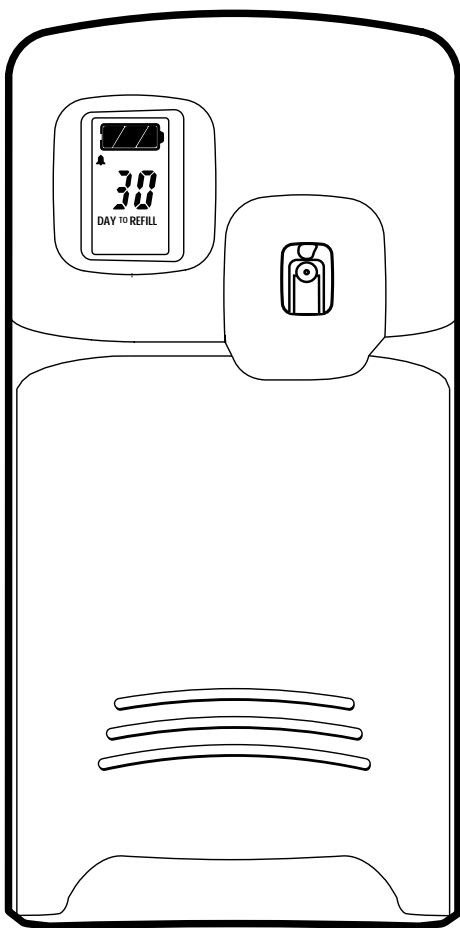

TC TECHNICAL CONCEPTS
RESTROOM HYGIENE THROUGH TECHNOLOGY

World Headquarters: 1301 Allanson Rd, Mundelein, IL 60060 USA

0806MBOIUK01